

To our customers,

---

## Old Company Name in Catalogs and Other Documents

---

On April 1<sup>st</sup>, 2010, NEC Electronics Corporation merged with Renesas Technology Corporation, and Renesas Electronics Corporation took over all the business of both companies. Therefore, although the old company name remains in this document, it is a valid Renesas Electronics document. We appreciate your understanding.

Renesas Electronics website: <http://www.renesas.com>

April 1<sup>st</sup>, 2010  
Renesas Electronics Corporation

Issued by: Renesas Electronics Corporation (<http://www.renesas.com>)

Send any inquiries to <http://www.renesas.com/inquiry>.

## Notice

1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
2. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
7. Renesas Electronics products are classified according to the following three quality grades: “Standard”, “High Quality”, and “Specific”. The recommended applications for each Renesas Electronics product depends on the product’s quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as “Specific” without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics product for any application for which it is not intended without the prior written consent of Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for an application categorized as “Specific” or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electronics. The quality grade of each Renesas Electronics product is “Standard” unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.
  - “Standard”: Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots.
  - “High Quality”: Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; safety equipment; and medical equipment not specifically designed for life support.
  - “Specific”: Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.
8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.

(Note 1) “Renesas Electronics” as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.

(Note 2) “Renesas Electronics product(s)” means any product developed or manufactured by or for Renesas Electronics.

---

# R8C/Tiny Series IC Socket Board

## M3A-0112

### Release Note, 1.00 Edition

Renesas Solutions Corp.

April 15, 2004

Thank you for purchasing the R8C/Tiny Series IC Socket Board (M3A-0112).

This release note explains how to use the IC Socket Board (M3A-0112). Please be sure to read it before using your IC Socket Board.

#### (Table of Contents)

1. Preface .....	2
2. Precautions (Be sure to read) .....	2
3. Product Overview .....	2
4. Product Specifications.....	2
5. Package Information .....	3
6. IC Socket Board (M3A-0112) Configuration .....	3
6.1. External Specifications .....	3
6.2. External Power Supply Specifications .....	3
6.3. Jumper Specifications.....	3
6.4. Switch Specifications .....	3
6.5. Connector Specifications.....	4
7. Usage .....	5
7.1. Set Up.....	5
7.2. Write Procedure .....	6
8. Latest Information .....	6

---

## 1. Preface

This release note describes the precautions and how to use the hardware included in the M3A-0112.

## 2. Precautions (Be sure to read)

### [Extraction of MCU]

When removing microcomputer from the IC Socket, in use of the IC Socket Board (M3A-0112), be sure to set the power switch of the IC Socket Board to OFF and remove a microcomputer.

### [Connection of Flash Writer]

Each of the communication connectors, CN1 and CN2 of the IC Socket Board (M3A-0112) is wired-OR connection. Do not connect two or more flash writers to the IC Socket Board. When connecting several flash writers and using the IC Socket Board, microcomputer and flash writer may be damaged.

## 3. Product Overview

R8C/Tiny Series IC Socket Board (M3A-0112) is a write-only IC Socket Board to program to the R8C/Tiny Series using various flash writers.

### [Applicable Microcomputer] \*1

R8C/10 to 13 Groups 32-Pin Version Flash Microcomputer (Package : 32P6U-A)

\*1 : There is a MCU which is not applied by the Flash Writer to be used. Please confirm the applicable microcomputer of the flash writer which you use.

### [Applicable Flash Writers]

(1) Renesas Technology Corp.

· E7 (HS0007TCU01H)

Homepage : [http://www.renesas.com/fmwk.jsp?cnt=e7\\_tools\\_product\\_landing.jsp&fp=/products/tools/emulation\\_debugging/onchip\\_debuggers/e7/](http://www.renesas.com/fmwk.jsp?cnt=e7_tools_product_landing.jsp&fp=/products/tools/emulation_debugging/onchip_debuggers/e7/)

(1) Renesas Solutions Corp.

· USB Flash Writer (M3A-0665)

· Flash Starter (M3A-0806)

Homepage : <http://www.renesas.com/en/m16c>

(2) Sunny Giken Inc.

· Multi Flash Micro-Computer Programmer MFW-1

· USB Compliant Flash Micro-Computer Programmer S550-MFW1U

· USB Compliant Ultra-Small Flash Micro-Computer Programmer S550-SFW1U

Homepage : <http://www.sunnygiken.co.jp/english/index.html>

## 4. Product Specifications

Table 4-1 shows the specifications of the IC Socket Board (M3A-0112)

Table 4-1 Specifications of the IC Socket Board (M3A-0112)

Item		M3A-0112
Operation Voltage		5.0V±5% (Supplies from external power supply)
Operation Environment	1.Operation Ambient Temperature	25±5[°C]
	2.Humidity	No dew drops allowed

---

## 5. Package Information

Table 5-1 shows the package information of the IC Socket Board (M3A-0112).

Table 5-1 Package Information of the IC Socket Board (M3A-0112)

Product Name	Quantity	Remark
IC Socket Board (M3A-0112)	1 pc	
Power Cable	1 pc	
Release Note	1 copy	In Japanese and English

## 6. IC Socket Board (M3A-0112) Configuration

### 6.1. External Specifications

Table 6-1 shows the external specifications of the IC Socket Board (M3A-0112).

Table 6-1 External Specifications of the IC Socket Board (M3A-0112)

Item	Description	Remark
Connector	[CN1] : Communication connector (for Renesas Solutions / Sunny Giken)	Silk Name For FoUSB
	[CN2] : Communication connector (for Renesas Technology)	Silk Name For E7
	[CN3] : Power supply connector	
IC Socket	[IC1] : 32pin, Package type 32P6U-A	
Oscillator	[CST1] : Not equipped*1	
Switch	[SW1] : Power supply switch, Switch type Tactile	
LED	[LED1] : Power supply indicator	
Jumper	[JP1] : MODE pin pull-up / for pull-down switch	
	[JP2] : Not equipped	

\*1: When using Flash Starter (M3A-0806), equip 16MHz-oscillator.

### 6.2. External Power Supply Specifications

1) DC Power Supply Connector (CN3)

When using DC power supply, input 5.0[V] ± 5%.

### 6.3. Jumper Specifications

1) JP1

JP1 is used for pull-up of MODE pin (28 pin) / pull-down switch. Table 6-2 shows the JP1 setting.

Table 6-2 JP1 Setting

Jumper Setting	Description	Remark
"H"	Pull-up	Default
"L"	Pull-down	

### 6.4. Switch Specifications

SW1 is used for the power supply switch on the IC Socket Board.

## 6.5. Connector Specifications

### 1) CN1 : For FoUSB

CN1 is a communication connector for the flash writer of Renesas Solutions and Sunny Giken. Table 6-5 shows the CN1 Pin Assignment.

10	9
8	7
6	5
4	3
2	1
Pin No.	Signal *1
1	Vcc
2	MODE
3	SCLK
4	RxD1
5	-----
6	-----
7	GND
8	RESET
9	-----
10	TxD11

Refer) CN1

\*1 : Signal name of microcomputer

Product Name : 2.54mm Pitch 10-Pin Connector (Straight)

Part Number : HIF3FC-10PA-2.54DSA

Manufacturer : HIROSE ELECTRIC CO.,LTD

### 2) CN2 : For E7

CN2 is a communication connector for the flash writer of Renesas Technology. Table 6-6 shows the CN2 pin Assignment.

14	13
12	11
10	9
8	7
6	5
4	3
2	1
Pin No.	Signal *1
1	SCLK
2	GND
3	N.C.
4	GND
5	TxD11
6	GND
7	MODE
8	Vcc
9	N.C.
10	GND
11	RxD
12	GND
13	RESET
14	GND

Refer) CN2

\*1: Signal name of microcomputer

Product Name : 2.54mm Pitch 14-Pin Connector (Straight)

Part Number : 7614-6002

Manufacturer : SUMITOMO 3M Limited

---

## 7. Usage

### 7.1. Set Up

Procedure 1 Connect external power supply to M3A-0112

\* M3A-0112, MCU or flash writer may be damaged due to insert incorrectly, Pay attention to the power supply polarity.

Procedure 2 Connect flash writer and connector and connector CN1 (CN2 when using E7)

Only when using Flash starter (M3A-0806), connect "L" and the middle pin of the JP1 and mount 16MHz oscillator on the CST1.

Procedure 3 Supply the power from the external power supply.

Confirm whether the power LED on the M3A-0112 is turned off or not.

When the power LED is turned on, press down the power switch and turn off the power LED.

An set-up is completed.


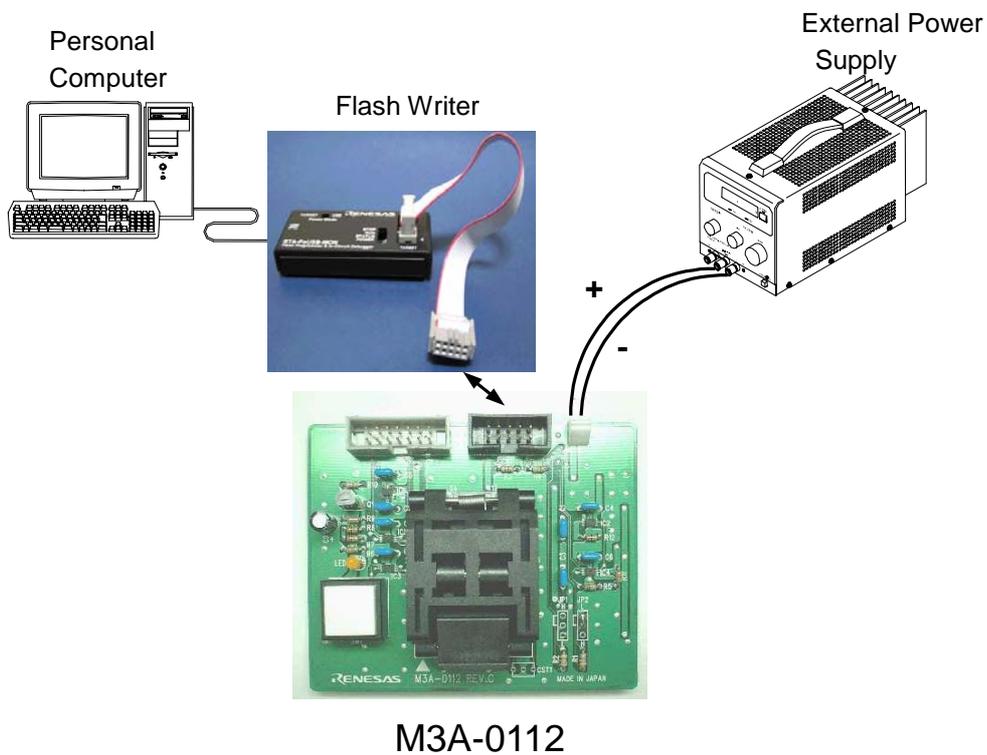


Figure 7.1 M3A-0112 Connecting Example

---

## 7.2. Write Procedure

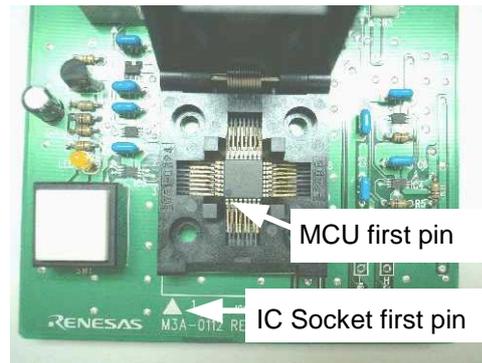

Procedure 1 Place a MCU on the M3A-0112 Socket.

M3A-0112, MCU or flash writer may be damaged due to insert incorrectly, Pay attention to the insert direction.

Procedure 2 Press down the power switch and confirm whether the power LED is turned on

Procedure 3 Write a program into the MCU internal flash memory by a flash writer.

For a flash writer, confirm the programmer manual which you are using and write a program.

Procedure 4 Press down the power switch and confirm whether the power LED is turned off.

When the LED is turned off, remove the MCU from the M3A-0112.

Go back to the procedure 1 and MCU rewriting is enabled continuously.

## 8. Latest Information

The latest R8C/Tiny Series IC Socket Board information can be browsed and downloaded from Renesas home page shown below.

Home page : <http://www.renesas.com/en/m16c>

- END OF FILE -